


VIVID Quick Start Guide

Activating the Device

The device is shipped with the batteries installed and a pull tab on the positive terminal of the battery. Removing the pull tab will activate the device. **There is no need to open the enclosure to activate the device**.

System LED will blink until device has joined Network Server.

LoRa LED will blink to indicate Uplink Events

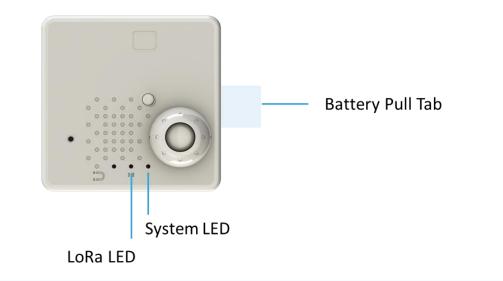

Note:

- LED will blink for every message sent to Network Server.
- Reed switch is disabled by default. A magnet required to activate the switch (not provided in the box)

Commissioning & Troubleshooting



Commissioning the Device Using LeapX Application

To install LeapX Application on your Smart Device, please search for "TEKTELIC LeapX" on the Google Play Store or the Apple App Store. Once the app is installed, you can create an account or log in using the username and password of your existing TEKTELIC account. Then follow the in-app instructions online.







If the device remains blinking red for more than two minutes follow these troubleshooting actions:

• Ensure the device is commissioned on the Network Server

Google Play

- Ensure the local LoRa Gateway has also been provisioned on the Network Server
- Ensure a local LoRa Gateway is online

Note: if you have questions about using device please refer to TRM document on **knowledgehub.tektelic.com**.

Configuration & Customization

Default Reporting Periods

Configuration Name	Default Reporting Periods
Battery Status	Every Hour
Ambient Temperature	Every Hour
Ambient Relative Humidity	Every Hour
Reed Switch/Hall Effect	Event Based
Light	Disabled by Default
Accelerometer	Disabled by Default
MCU Temperature	Disabled by Default
PIR	Event Based, Cleared after 5 mins of no motion

To make changes to reporting periods or other configurations please refer to <u>KONA Atlas Application</u> at <u>www.atlas.tektelic.com</u>

Note: if you have questions about using device please refer to TRM document on **knowledgehub.tektelic.com**.