


KONA MICRO LITE GATEWAY

Quick Start Guide


Powering Up the Gateway

KONA Micro Lite gateway supports one external LoRa antenna, copper Ethernet backhaul. Gateway is powered by an AC-DC power adapter.

What's in the Box:

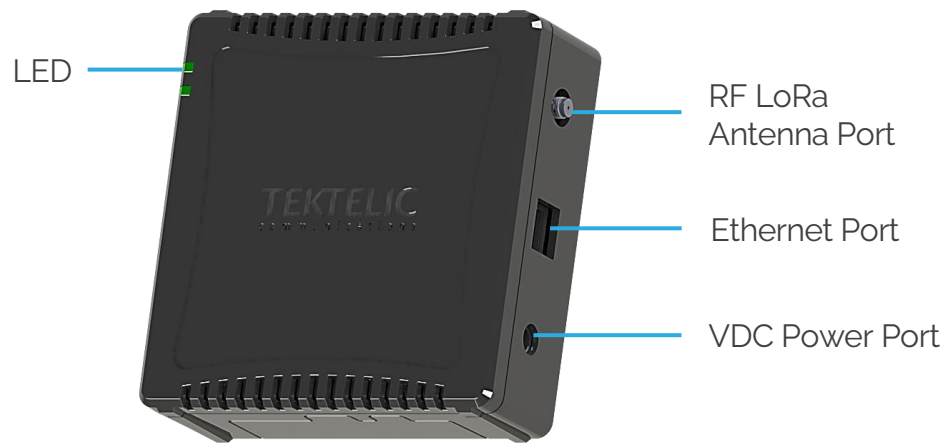

KONA Micro Gateway

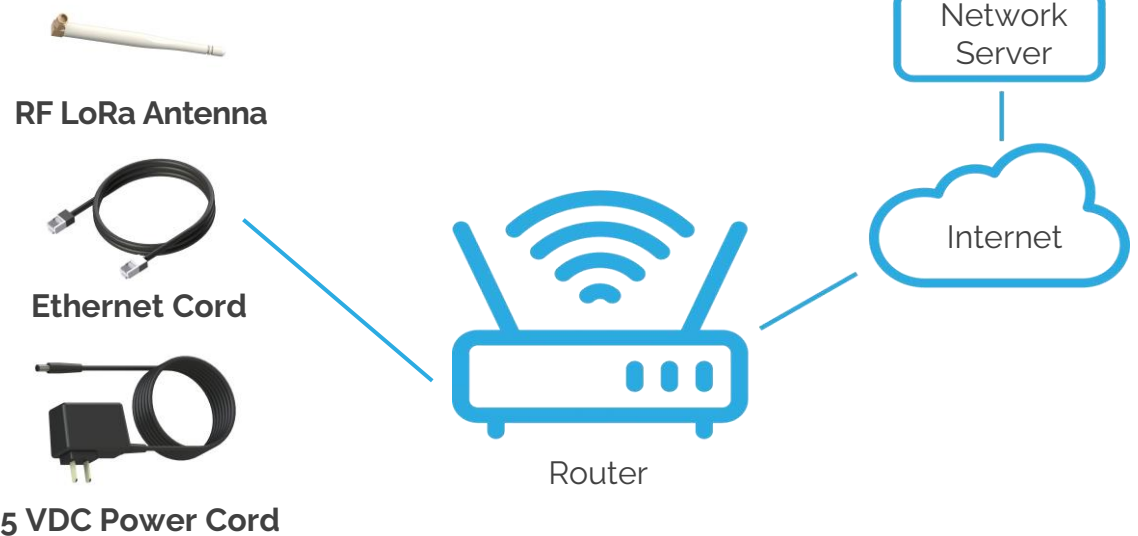


Note: Please refer to [Setup Video](#) for further instructions on how to assemble the accessories.

Configuration & Activation

Commissioning the Gateway Using LeapX Application




To install LeapX Application on your Smart Device, please search for "TEKTELIC LeapX" on the Google Play Store or the Apple App Store. Once the app is installed, you can create an account or log in using the username and password of your existing TEKTELIC account. Then follow the in-app instructions online.

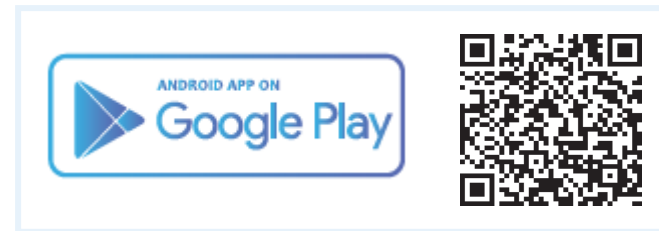

Note: once the Gateway shows "Online" you are ready to add sensors to your network.

Gateway Troubleshooting

KONA Micro Lite LED States

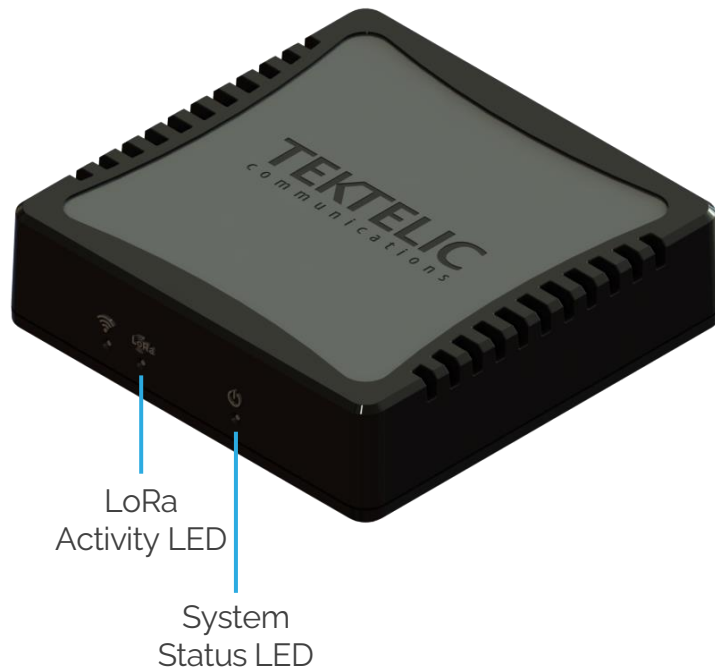

LoRa Activity LED

LED Behaviour	Description
Flashing	<ul style="list-style-type: none">• Packet received• Uplink packed is received by gateway and is sent to the network server• Downlink packed is received from the network server and is transmitted to the end device via the Gateway

System status LED

LED Behaviour	Description
Rapidly Flashing	Gateway obtaining an IP address via DHCP
Solid ON	Normal operation
Flashing in slow rate	<ul style="list-style-type: none">• The Gateway is unable to negotiate an Ethernet link• Unable to obtain an IP address via DHCP• The connection to network server is not established• Other problems that could prevent normal operation

If you have questions about using this Gateway please refer to the knowledge base at knowledgehub.tektelic.com