



TEKTELIC Communications Inc.
7657 10th Street NE Calgary, Alberta
Canada, T2E 8X2

LoRa IoT Industrial Transceiver

User Guide

Document Type: User Guide

Document Number: T0005485_UG

Document Version: 1.10

Product Name: LoRa IoT Industrial Transceiver

Product Code & Revision: T0005322 (EU Module) Rev E
T0005500 (NA/DN Module) Rev E
T0005633 (CN Module) Rev C

Release Date: November 12, 2020

PROPRIETARY:

The information contained in this document is the property of TEKTELIC Communications Inc. Except as specifically authorized in writing by TEKTELIC, the holder of this document shall keep all information contained herein confidential, and shall protect the same in whole or in part from disclosure to all third parties.

© 2020 TEKTELIC Communications Inc., all rights reserved.

All products, names, and services are trademarks and registered trademarks of their respective companies.

Revision History

Version	Date	Editor	Comments
0.1	Feb 9, 2018	Devin Smith	First release
1.0	May 27, 2019	Taras Kuzyk	Updates for Rev C1 PCBAs
1.1	Jun 6, 2019	Reza Nikjah	<ul style="list-style-type: none"> • Cleanups (titles, versions, etc.) • Added Acronyms and Glossary • Updated cable gland specs and compatible cables/wires
1.2	June 12, 2019	Conor Karperien	Removal of Industry Canada Section as certification will not cover IC
1.3	June 18, 2019	Conor Karperien	Addition of FCC information
1.4	June 25, 2019	Lukas Morrison	Addition of battery replacement procedure.
1.5	July 18, 2019	Conor Karperien	Updates reflecting the merge of the DN variant with the NA variant & addition of proposition 65
1.6	July 30, 2019	Emma Tholl	Added information on thermistor input conversion
1.7	October 15, 2019	Conor Karperien	Changed formatting to reflect new design
1.8	May 20, 2020	Conor Karperien	<ul style="list-style-type: none"> • General Updates • Corrected Table 2-1
1.9	August 7, 2020	Lukas Morrison	<ul style="list-style-type: none"> • Clarification of Figure 1-2. • Removed support for relative humidity. • Removed obsolete model - T0004728 (NA Module) Rev C. • Clarification of Input 3 functionality in past revisions (Section 4.4.3). • Simplification of thermistor conversion formulas (Section 4.5). • Now referred to as "Industrial Transceiver".
1.10	November 12, 2020	Lukas Morrison	Updated Figure 2-2 and Figure 4-1.

Table of Contents

Revision History	2
Table of Contents	3
List of Tables	5
List of Figures	5
Acronyms and Glossary.....	6
1 Product Description	7
1.1 Overview	7
1.2 Physical Interfaces.....	8
1.3 Specifications.....	8
2 Installation	11
2.1 Included Product and Installation Material	11
2.2 Safety Precautions.....	11
2.3 Unpacking and Inspection	11
2.4 Equipment Required for Installation.....	11
2.5 Industrial Transceiver Mounting	11
2.6 Cable Installation.....	12
3 Power Up, Commissioning, and Monitoring	16
3.1 Required Equipment	16
3.2 Power Up/Down Procedure	16
4 Operation, Alarms, and Management	17
4.1 Configuration.....	17
4.2 Default Configuration.....	17
4.3 LED Behavior	17
4.4 Inputs and Outputs	18
4.4.1 Digital Input (Input 1).....	19
4.4.2 Current Input (Input 2).....	19
4.4.3 Thermistor Input (Input 3)	19
4.4.4 Open Drain FET (Output 1)	20
4.4.5 Solid State Relay (Output 2).....	20

4.5 Thermistor Input (Input 3) Conversion 20

5 Battery Replacement 22

6 Compliance Statements 24

6.1 Proposition 65 24

References 25

List of Tables

Table 1-1: Industrial Transceiver Models.....	7
Table 1-2: LoRa IoT Industrial Transceiver Specifications.....	8
Table 1-3: Serial Interface Operating Specifications.....	10
Table 1-4: LoRa IoT Industrial Transceiver Absolute Maximum Ratings.....	10

List of Figures

Figure 1-1: LoRa IoT Industrial Transceiver Views	7
Figure 1-2: Industrial Transceiver Interface Layout (Terminal Block and Battery Connector Pinout).....	8
Figure 2-1: Mounting Holes and Threaded Cover Holes.....	12
Figure 2-2: Industrial Transceiver External Connector Signals	14
Figure 4-1: Industrial Transceiver LEDs.....	18
Figure 5-1: Enclosure Screws (x4)	22
Figure 5-2: Battery Connector Removal.....	23

Acronyms and Glossary

ADC	Analog-To-Digital Converter
AWG	American Wire Gauge
bps	bits per second
DC	Direct Current
FCC	Federal Communications Commissions
FET	Field-Effect Transistor
Industrial Transceiver ...	a LoRa IoT Industrial Transceiver module
I/O	Input / Output
IoT	Internet of Things
IP	Ingress Protection
LED	Light Emitting Diode
LoRa	a patented “long-range” IoT technology acquired by Semtech
LoRaWAN	LoRa Wide Area Network (a network protocol based on LoRa)
LSB	Least Significant Bit
LTC	Lithium Thionyl Chloride (chemistry of LTC batteries)
MCU	Microcontroller Unit
NC	Not Connected
OC	Open Circuit
OTA	Over-The-Air
PCB	Printed Circuit Board
PCBA	PCB Assembly
PTC	Positive Temperature Coefficient
Rev	Revision
RF	Radio Frequency
RFU	Reserved for Future Use
RS	Recommended Standard (as in RS-232, RS-422, RS-485)
RTU	Remote Terminal Unit (as a Modbus type)
Rx	Receiver / Receive
SC	Short Circuit
SSR	Solid-State Relay
Transceiver	a LoRa IoT Industrial Transceiver module
Transducer	a sensing element attached to the Industrial Transceiver
Tx	Transmitter / Transmit
UG	User Guide (this document)
UV	Ultraviolet
ver.	version
WSOR ..	Weld-Slag and Oil-Resistance

1 Product Description

1.1 Overview

The TEKTELIC LoRa IoT Industrial Transceiver is a multi-purpose LoRaWAN IoT sensor intended for interfacing automation and control instrumentation to a LoRaWAN network. The Industrial Transceiver supports up to three analog and digital inputs allowing for the remote capture of data, and two switched outputs to actuate externally connected devices. The built-in serial relay allows for serial communication over a RS-232 or RS-485/422 bus. Table 1-1 presents the currently available LoRa IoT Industrial Transceiver models.

Table 1-1: Industrial Transceiver Models

Product Code & Revision	Description	RF Region	Tx Band (MHz)	Rx Band (MHz)
T0005322 Rev E	Industrial Transceiver Module, EU	EU868	863 – 870	
T0005500 Rev E	Industrial Transceiver Module, NA/DN	US915	902.3 – 914.9	923.3 – 927.5
T0005633 Rev C	Industrial Transceiver Module, CN	CN470	470.3 – 489.3	500.3 – 509.7

The main features of the Industrial Transceiver are the following:

- **Temperature Transducer:** Reports ambient temperature of the local environment.
- **Digital Input:** Reports open-drain or driven signals.
- **Analog 0 mA – 20 mA Current Input:** Monitors and reports current outputs of remote equipment.
- **Analog Thermistor Input:** Monitors and reports the voltages corresponding to the variable impedance of a remote 10-k Ω temperature probe.
- **60 V DC Output (FET Based):** Non-isolated open-drain output.
- **60 V DC Output (SSR):** Isolated relay output.

Figure 1-1 illustrates the Industrial Transceiver in the enclosure with both solid and transparent views.

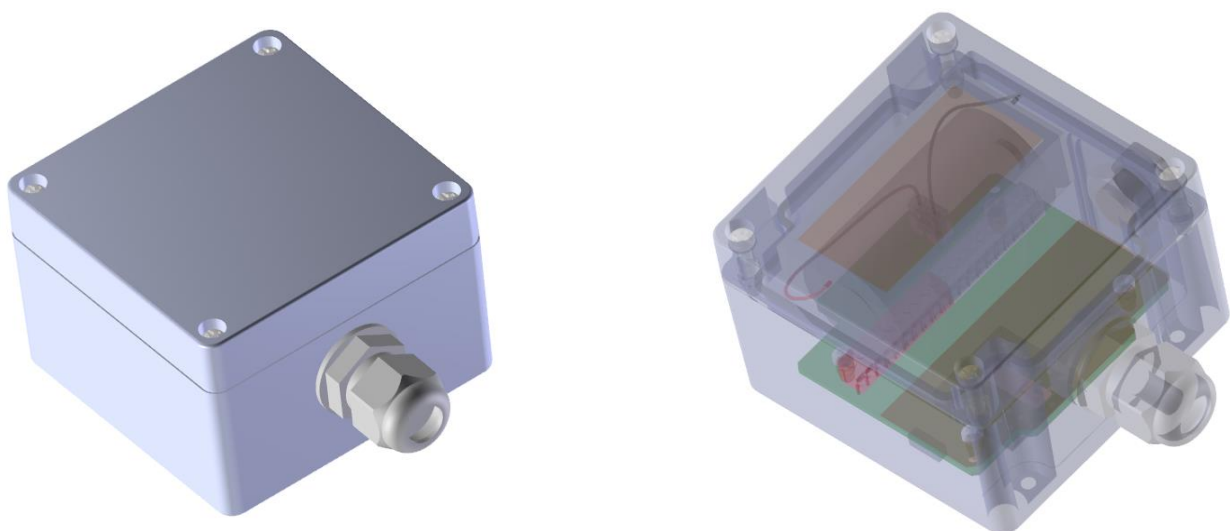


Figure 1-1: LoRa IoT Industrial Transceiver Views

1.2 Physical Interfaces

Figure 1-2 illustrates the terminal block on the PCBA, which provides customer accessible interfaces for the Industrial Transceiver.¹ All models share the same layout.

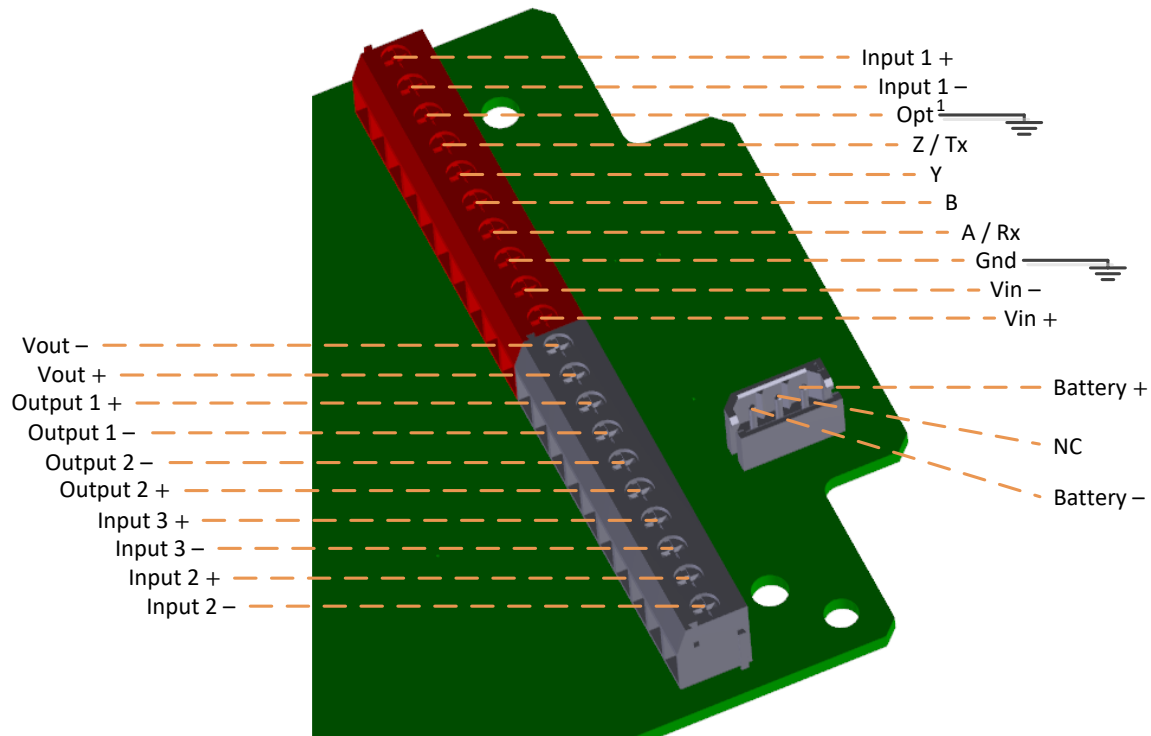


Figure 1-2: Industrial Transceiver Interface Layout (Terminal Block and Battery Connector Pinout)

1.3 Specifications

The Industrial Transceiver specifications are listed in Table 1-2. The serial interface operating specifications are listed in Table 1-3. Lastly, the absolute maximum ratings for the Industrial Transceiver are listed in Table 1-4.

Table 1-2: LoRa IoT Industrial Transceiver Specifications

Attribute	Specification
Use Environment	Industrial, indoor/outdoor commercial/residential
Environmental Rating	IP67
Enclosure	Hammond Manufacturing 1554E2GY UL 508 approved which includes 720-hour UV testing
Cable Gland	Bud Industries NG-9513 Cable Gland Nylon PG11 Black Cable diameter range 0.20" ~ 0.30" (5.0mm ~ 7.5mm)
Humidity Vent	IP67 rated

¹ Opt terminal block connection is RFU.

Operating Temperature	-40°C – 85°C
Storage Temperature for Optimal Battery Life	-40°C – 75°C
Operating Relative Humidity	10% – 100%, condensing
Storage Relative Humidity	5% – 95%, non-condensing
Size	90 mm x 90 mm x 60.5 mm
Weight	Without battery: 205 g With D-cell LTC battery: 295 g
Power Source	<ul style="list-style-type: none"> Battery powered: 1x D-cell LTC with keyed battery connector and reverse polarity protection Externally powered: 10 V – 26 V DC (typically 12 V – 24 V DC) with reverse polarity protection
Network technology/Frequency band	LoRaWAN in several variants (see Table 1-1): US915, EU868, DN915, CN470
Air Interface	LoRa
Battery Lifetime	25 years ²
Maximum Tx Power	22 dBm
LEDs (internal)	System LED (Green): Joining the network activity LoRa LED (Red): LoRa Tx or Rx activity
Sensing Functions	Temperature (MCU & ambient), 1x digital input, 2x analog input, 2x digital output
MCU Temperature Measurement Accuracy	< ±5°C between -40°C and 85°C
Ambient Temperature Measurement Accuracy	±0.5°C between 15°C and 40°C ±1°C between 0°C and 60°C [as per the HTS221 datasheet]
Digital Input (Input 1)	Input open drain or driven signals Input Low: SC or 0 V – 1.8 V Input High: OC or 1.8 V – 60 V Asynchronous response
Analog Current (Input 2)	Measurement of input over the range 0mA – 20mA. Use of 12-bit ADC gives a precision of 5.4 µA/LSB (with input range up to 22.3 mA corresponding to the ADC reference voltage of 1.25 V).
Thermistor (Input 3)	Measurement of a 10-kΩ thermistor as a remote temperature probe (e.g. Vishay components NTCAIMME3C90686 or Cantherm CWF3AA103G3380).
Serial Interface	Support of Modbus RTU device over RS-232/422/485 (half- or full-duplex mode) with a baud rate support of up to at least 250 kbps.

² This is for transmission at maximum power every 15 minutes at room temperature, with an LTC battery having a nominal capacity of 19 Ah and self-discharge rate of 0.7%. Large variations to this estimate can occur depending on the ambient temperature, amount of usage, battery capacity, and battery self-discharge rate. For example, continuously being at -30°C and transmitting at maximum power every 30 seconds, the same battery may not last above a year.

FET Output (Output 1)	Grounded source FET that allows open drain style operation on external lines up to 60 V. Output impedance 10.2 Ω when turned on, > 40 M Ω when turned off.
SSR Output (Output 2)	An isolated, polarity agnostic relay switch for operation on external lines up to ± 60 V. Output impedance 35.6 Ω when turned on, > 40 M Ω when turned off.

Table 1-3: Serial Interface Operating Specifications

Parameter	Min	Typical	Max
RS-232 Tx	± 5 V	± 5.5 V	–
RS-232 Rx	-15 V	–	+15 V
RS-485/422 Tx^{3,4}	1.5 V differential	–	3.3 V differential
RS-485/422 Rx Threshold^{3,4}	-200 mV differential	-125 mV differential	-50 mV differential

Table 1-4: LoRa IoT Industrial Transceiver Absolute Maximum Ratings

Parameter	Absolute Maximum ⁵
Operating Temperature Range	-40°C – 85°C
Battery Vin	3.7 V
External Vin	42 V
Digital Input (Input 1)	60 V
Current Input (Input 2)	46 mA
FET Output (Output 1)	Voltage rating: <ul style="list-style-type: none"> • 60 V DC operating • 100 V DC no damage Current rating: <ul style="list-style-type: none"> • 75 mA at -40°C • 50 mA at 23°C • 25 mA at 85°C
SSR Output (Output 2)	Voltage rating: <ul style="list-style-type: none"> • ± 60 V DC operating • ± 100 V DC no damage Current rating: <ul style="list-style-type: none"> • 75 mA at -40°C • 50 mA at 23°C • 25 mA at 85°C
Serial Interface	+/-18 V

³ RS-485 signals are differential and are measured as such.

⁴ The serial transceiver in the design is compliant with both RS-232 and RS-422/485 standards.

⁵ Operating outside of these ranges will damage the Transceiver or battery.

2 Installation

2.1 Included Product and Installation Material

The following items are shipped with each unit:

- LoRa IoT Industrial Transceiver
- LTC Battery, D-size
- Product Manual

2.2 Safety Precautions

The following safety precautions should be observed:

- Use only LTC cells.
- Do not exceed the maximum specified terminal voltages.
- All installation practices must be in accordance with the local and national electrical codes.
- Transceiver inputs and outputs do not provide electrical isolation to system ground, or between each other.

2.3 Unpacking and Inspection

The following should be considered during the unpacking of a new Industrial Transceiver:

- Inspect the shipping carton and report any significant damage to TEKTELIC.
- Unpacking should be conducted in a clean and dry location.
- Do not discard the shipping box or inserts as they will be required if a unit is returned for repair or re-configuration.

2.4 Equipment Required for Installation

The following tools are required to install the Industrial Transceiver:

- #2 Phillips screwdriver (4 x enclosure screws)
- #0 Phillips screwdriver (internal terminal block connections)
- Wrench to tighten cable gland
- Wire Stripper
- Wire Cutter

2.5 Industrial Transceiver Mounting

When the cover is removed, four (4) mounting holes are exposed (see Figure 2-1). These mounting holes can be used to screw the enclosure to a solid surface. The recommended mounting screw size is M3 or #6. Mounting screws are not provided with the unit.

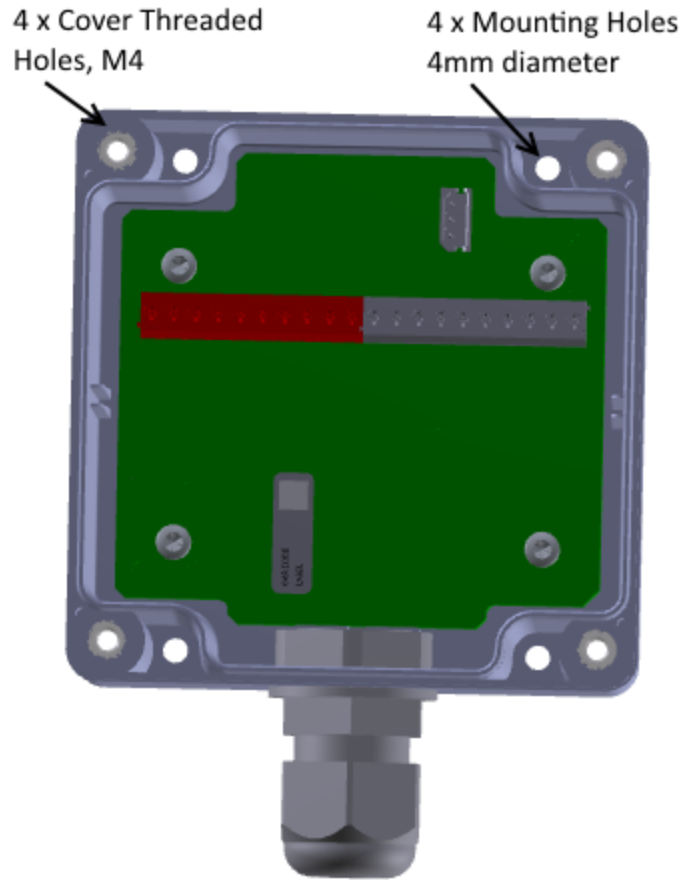


Figure 2-1: Mounting Holes and Threaded Cover Holes

The mounting surface must be capable of holding more than 2 kg (4.5 lbs). Clearance must be provided for the modules cable gland and input cable.

2.6 Cable Installation

The Industrial Transceiver enclosure is provided with an IP68 cable gland through which all connections must be routed. The supplied cable gland size is PG-11. This gland supports cables with a straight jacket of diameter of 5.0 mm to 9.9 mm (0.2" to 0.39"). The customer supplied cable must be rated for outdoor use and have a **single, smooth, and straight jacket** to achieve a watertight seal and IP68 rating with the gland. The recommended gland nut torque is 4 Nm (35 in-lbs).

Suggested cable: Molex 155220-0047 (Flamar Sensor Cable, WSOR Jacket, Unshielded, 12 Circuits, 24 AWG, 6.90 mm Diameter).

The I/O terminal block accepts 18 – 26 AWG wires. Select a cable that meets the application requirements and local and national electrical codes.

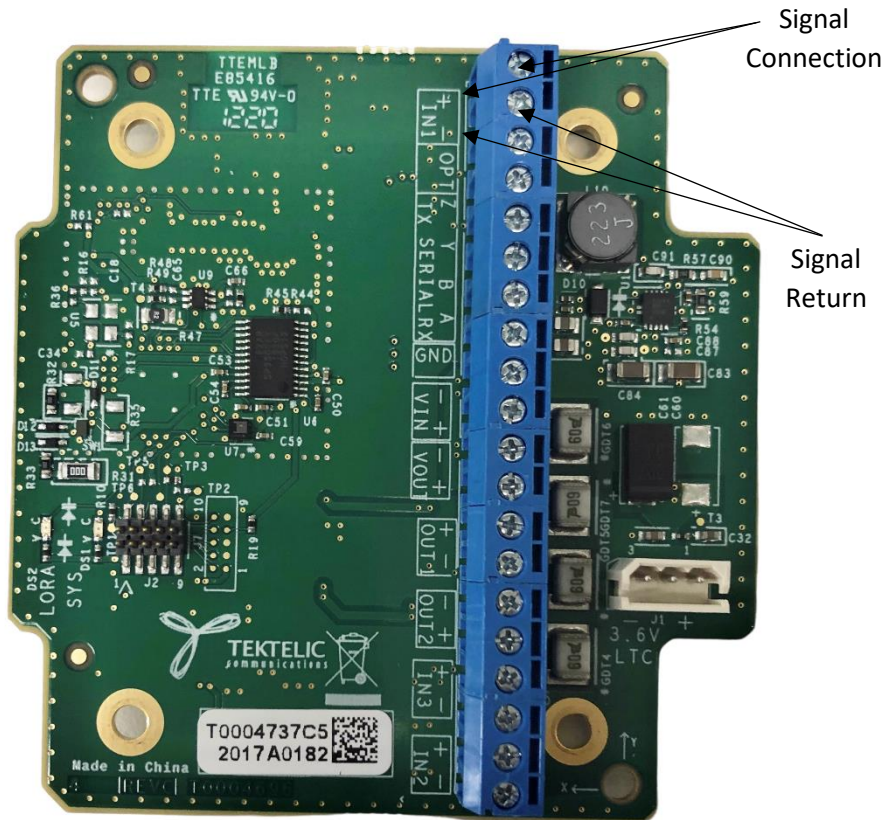


Figure 2-2 shows the terminal block wiring connections. To install the cable, first make the appropriate connections between the input cable and the terminal block. Next dress the internal wires so that the cable gland seals against the outer cable jacket. Finally, tighten the cable gland.

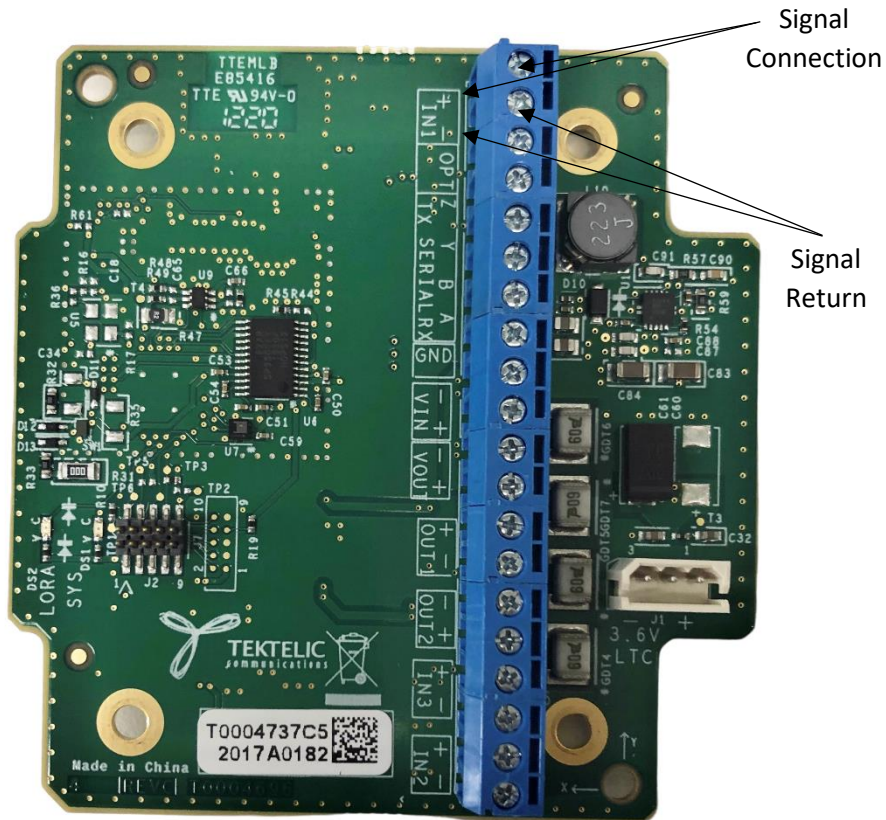


Figure 2-2: Industrial Transceiver External Connector Signals

The inputs and outputs are labeled on the PCB. Signal connections should be connected to the positive terminal (labeled '+') of the desired I/O channel as indicated by the silkscreen. Similarly, the return path should be connected to the negative terminal (labeled '-') of the matching I/O channel.

NOTE: Industrial Transceiver I/O are referenced to the PCBA ground and are not isolated (except for Output 2 that is an isolated relay switch).

The Industrial Transceiver serial port provides a means to connect the unit to other devices communicating over RS-232, RS-422, or RS-485 standard channels. No hardware flow control is offered for RS-232 operation. Full and half duplex modes are available in RS-485 operation as required.

The serial port connections on the terminal block have been shown in Table 2-1.

Table 2-1: Serial Port Connections

Terminal	RS-232	RS-422	RS-485 Half Duplex	RS-485 Full Duplex
Z / TX	Tx	Tx-	Data-	Tx-
Y	NC	Tx+	Data+	Tx+
B	NC	Rx-	NC	Rx-
A / RX	Rx	Rx+	NC	Rx+
GND	Ground	(Shield)	(Shield)	(Shield)

The GND labeled terminals provide a signal reference for single ended RS-232 signalling. When differential mode RS-422/485 is used, the GND terminals may be used for cable shield connections.

NOTE: Industrial Transceiver serial I/O are referenced to the PCBA ground and are not isolated, even in differential mode the I/O present no isolation.

3 Power Up, Commissioning, and Monitoring

3.1 Required Equipment

- A #2 Phillips screwdriver

3.2 Power Up/Down Procedure

- The Transceiver is shipped with the battery wire unplugged. Remove 4 screws holding the cover, to gain access to the battery connector. Be careful not to misplace the silicone cover gasket.
- Once the Transceiver is configured on the Network Server and input cable is installed, plug the battery into the receptacle on the PCBA. See Section 4.3 for the LED behaviour.
- Once the Transceiver is powered on, replace the cover and gasket. Make sure that the gasket is properly seated in the cover before placing on the Transceiver housing. Tighten the 4 cover screws to 2.5 lbf-in (30 N-cm).
- To reset or turn off the Transceiver the battery must be unplugged from the circuit board. The unit must remain un-powered for 1 minute to completely reset.

4 Operation, Alarms, and Management

4.1 Configuration

The Industrial Transceiver supports a full range of OTA configuration options. Specific technical details are available in the Industrial Transceiver Technical Reference Manual. All configuration commands need to be sent OTA during the Transceiver's downlink windows.

4.2 Default Configuration

The default configuration on the Industrial Transceiver is as follows:

- Report Temperature every one (1) hour.
- Report Battery Voltage every one (1) hour.
- Report actuation of the digital input element every one (1) actuation.
- Report Input 1 (Digital), Input 2 (Current) and Input 3 (Thermistor) reading every fifteen (15) minutes.

The default configuration of the Industrial Transceiver serial port is as follows:

- Protocol RS232
- Baud rate 115200 bps
- 8 Data Bits, No Parity Bits, 1 Stop Bit

4.3 LED Behavior

See Figure 4-1 for the location and identification of the Industrial Transceiver LEDs.

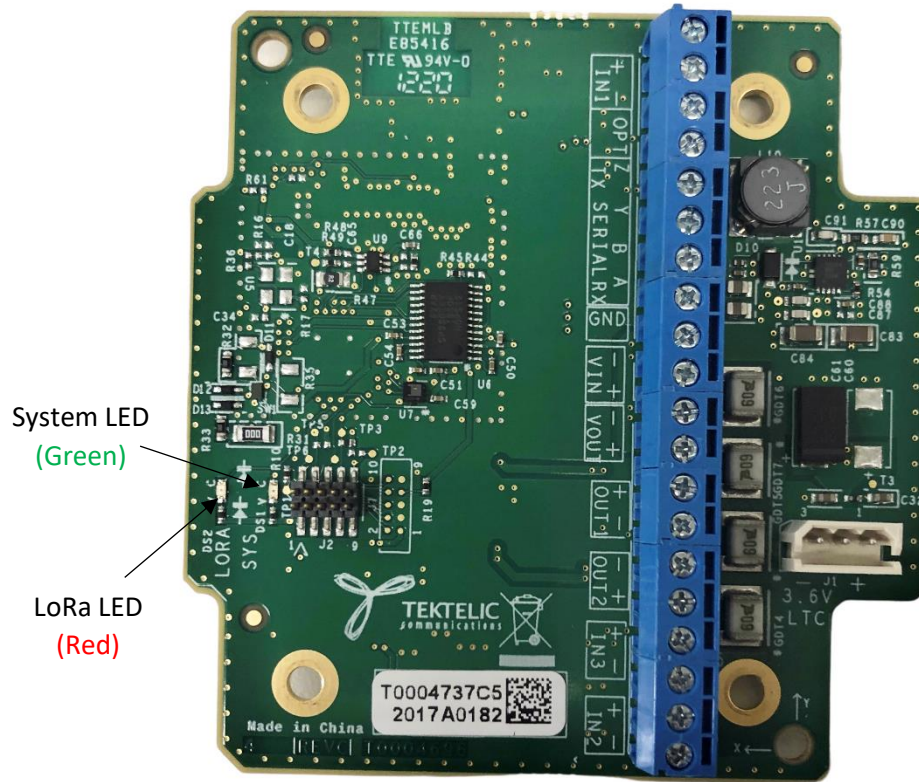


Figure 4-1: Industrial Transceiver LEDs

During the boot and join procedure:

- Both LEDs will come on briefly when power is first applied.
- After a small delay (< 1 second) the LEDs will turn off and one of them will blink briefly.
 - If the System LED blinks, then all health checks on the board have passed.
 - If the LoRa LED blinks, then one of the health checks has failed. Consider replacing the battery, or moving the Transceiver to an environment within the temperature range.
- Immediately after the delay, the join procedure will begin. During the time the System LED will blink continuously until the Transceiver joins a network.
- The LoRa LED will now blink whenever LoRa activity occurs on the Transceiver (transmitting or receiving packets)

During normal operation:

- The LoRa LED will blink whenever LoRa activity occurs on the Transceiver (transmitting or receiving packets)
- The System LED can be controlled via the downlink command interface.

4.4 Inputs and Outputs

Three input channels and two output channels are present on the Industrial Transceiver. All channels are connected to external devices (transducers) via the screw down terminal block (see

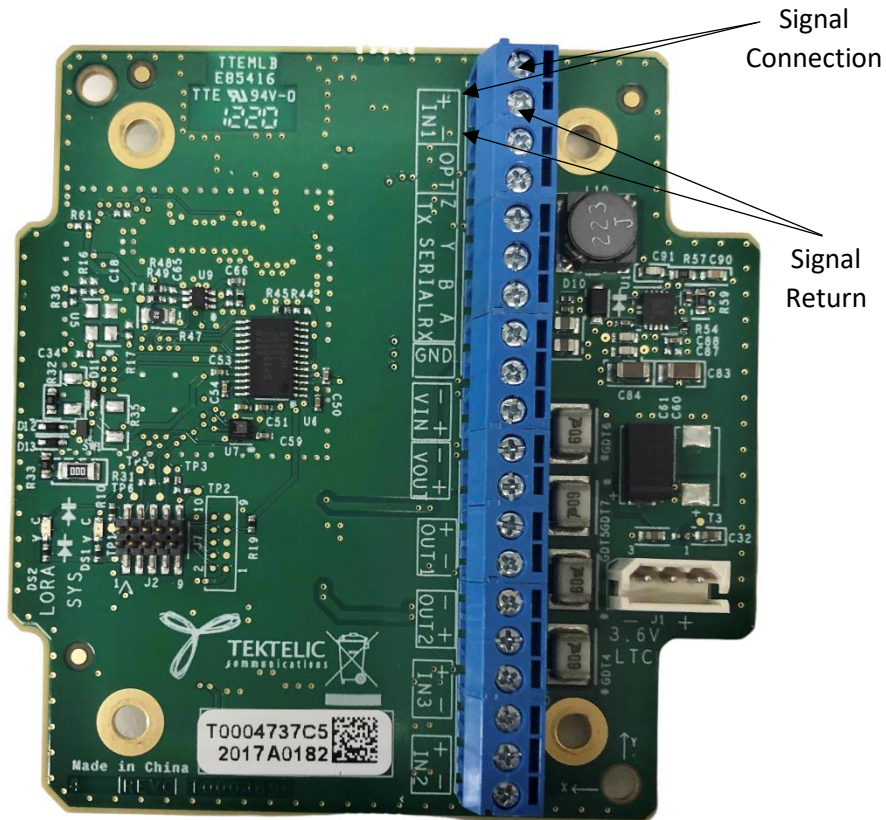


Figure 2-2).

4.4.1 Digital Input (Input 1)

The digital input channel allows an open drain/relay based or driven signal to be monitored. This input is compliant to 60 V. The signal to this input is treated as an interrupt and read asynchronously. Example applications for this input include leak detection and reading a magnetic reed switch.

4.4.2 Current Input (Input 2)

A current input channel on the Industrial Transceiver allows the measurement of the industry standard 4 – 20mA current signal. This is achieved by converting the input current to a voltage through a sensing resistor that is within the ADC measurement range. The 4 – 20mA current loop is a widely use signalling standard in the industrial environment as it offers good noise immunity and is relatively simple.

4.4.3 Thermistor Input (Input 3)⁶

The thermistor input permits measurement of remote temperature through a 10 kΩ thermistor probe. The Industrial Transceiver reports voltage values corresponding to the variable impedance of the thermistor. The voltage values can then be converted to temperatures using a conversion table or formula.

⁶ Board revisions of C1 and earlier have an Analog Input 3. The analog input allows the user to measure a voltage of 0 – 10 V. This is present on T0005322 (EU Module) Rev A.

4.4.4 Open Drain FET (Output 1)

The FET based output channel features a grounded source FET that allows open drain style operation on external lines up to 60 V. The PTC in the circuitry limits the operating current to 75 mA at -40°C, 50 mA at 23°C, and 25 mA at 85°C. As the FET source is connected to the PCB ground, this output switch is not isolated from the system.

4.4.5 Solid State Relay (Output 2)

Unlike the open drain output, the SSR output is isolated from the rest of the system (i.e. the PCB ground and other signals). The connection of the relay is polarity agnostic and is compliant to 60 V. Again, the PTC in the circuitry limits the operating current to 75 mA at -40°C, 50 mA at 23°C, and 25 mA at 85°C.

4.5 Thermistor Input (Input 3) Conversion

This section will describe the process used to convert the voltage data from the thermistor into a temperature value. The voltage reported back is based on the variable impedance of the thermistor. In order to convert this number into temperature two formulas must be used. The constant values include:

- $R = 68100 \Omega$ (68.1 k Ω)
- $V_{MCU} = 2.7 V$
- $R_0 = 10000 \Omega$ (10 k Ω)
- $T_0 = 298.15 K$ (25°C)
- $\beta = 3380$ (CWF3AA103G3380) or 3935 (NTCAIMME3C90686)

Firstly, a voltage divider equation is used to find the resistance of the variable resistor. This equation requires the MCU voltage, known resistor value, and the reported voltage value, V_{in} , as shown below. This formula can be rearranged to solve for the unknown value, R_T :

$$\begin{aligned} V_{in} &= V_{MCU} \frac{R_T}{R_T + R} \\ \downarrow \\ R_T &= \frac{R \cdot V_{in}}{V_{MCU} - V_{in}} \end{aligned} \quad \left. \vphantom{\begin{aligned} V_{in} &= V_{MCU} \frac{R_T}{R_T + R} \\ R_T &= \frac{R \cdot V_{in}}{V_{MCU} - V_{in}} \end{aligned}} \right\} \text{Voltage Divider Equation}$$

Once the three known values are plugged into the formula and R_T is obtained, the second formula, β -parameter equation, is implemented. This equation needs the β -value of the thermistor used, along with R_T , R_0 , and $T_0 = 298.15$. The value R_0 represents the resistance of the specific thermistor at T_0 (298.15 K or 25°C).

$$\begin{aligned} R_T &= R_0 e^{\beta \left(\frac{1}{T} - \frac{1}{T_0} \right)} \\ \downarrow \\ T &= \frac{T_0 \cdot \beta}{T_0 \ln(R_T/R_0) + \beta} \end{aligned} \quad \left. \vphantom{\begin{aligned} R_T &= R_0 e^{\beta \left(\frac{1}{T} - \frac{1}{T_0} \right)} \\ T &= \frac{T_0 \cdot \beta}{T_0 \ln(R_T/R_0) + \beta} \end{aligned}} \right\} \beta\text{-parameter Equation}$$

An overall formula for the conversion can be found below:

$$T = \frac{T_0 \cdot \beta}{T_0 \ln \left(\frac{R \cdot V_{in}}{R_0 \cdot (V_{MCU} - V_{in})} \right) + \beta}$$

Replacing variables with constant numbers yields:

$$T = \frac{298.15 \text{ K} \cdot 3380}{298.15 \ln\left(\frac{68100 \Omega \cdot V_{in}}{10000 \Omega \cdot (2.7 \text{ V} - V_{in})}\right) + 3380}$$

In Kelvin, for thermistor CWF3AA103G3380. Replace “3380” with “3935” for thermistor NTCAIMME3C90686. Note that temperature T in this formula is in Kelvin. To convert T into Celsius subtract 273.15.

Another method to get even more accurate conversion formula, at the expense of doing a full calibration of the thermistor, is to rearrange the above formula for T as,

$$T = \frac{-\beta}{\ln\left(\frac{V_{MCU} \frac{R_0}{R} e^{-\frac{\beta}{T_0}}}{V_{in}} - \frac{R_0}{R} e^{-\frac{\beta}{T_0}}\right)} \quad \text{or} \quad T = \frac{-\beta}{\ln\left(\frac{a}{V_{in}} - b\right)}$$

then to find parameters a and b by measuring temperatures using an accurate thermometer for different voltages, and performing curve fitting (i.e. basically calibrating a specific thermistor with a given β).

5 Battery Replacement

The LoRa IoT Industrial Transceiver can be powered with a D-size, 3.6 V, LTC battery (T0005303). Use only approved LTC cells when replacing the battery. The following are approved replacement batteries:

- Saft LS33600
- Tadiran TL-5930/S
- Xeno XL-205F STD

To access the battery, remove the four screws located on the top of the Industrial Transceiver enclosure (Figure 5-1). These screws require a #2 Phillips screwdriver.

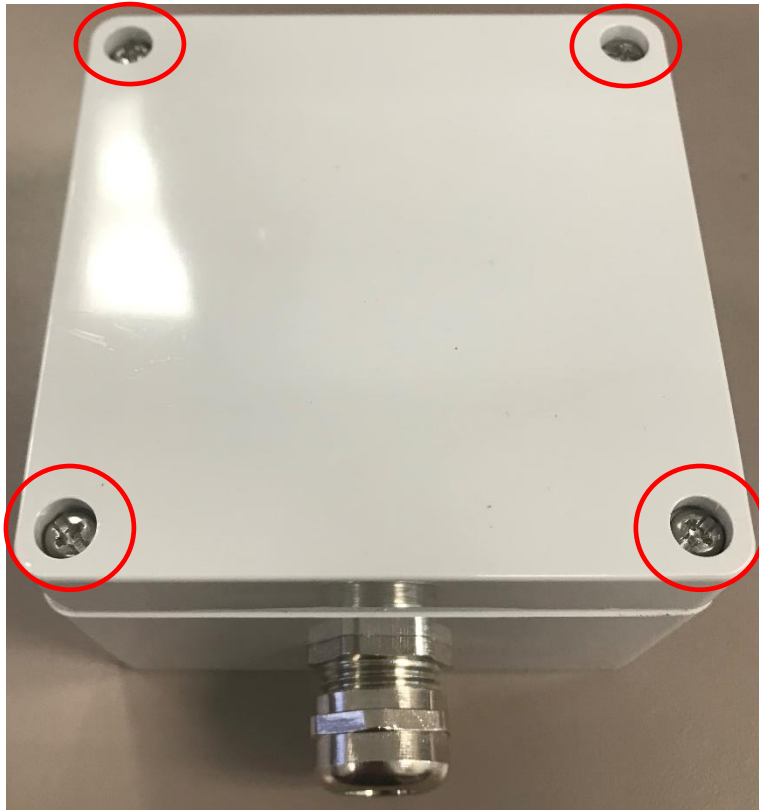


Figure 5-1: Enclosure Screws (x4)

1. Remove the four screws on the top of the enclosure.
2. Disconnect the battery from the receptacle on the PCBA, as shown in Figure 5-2.

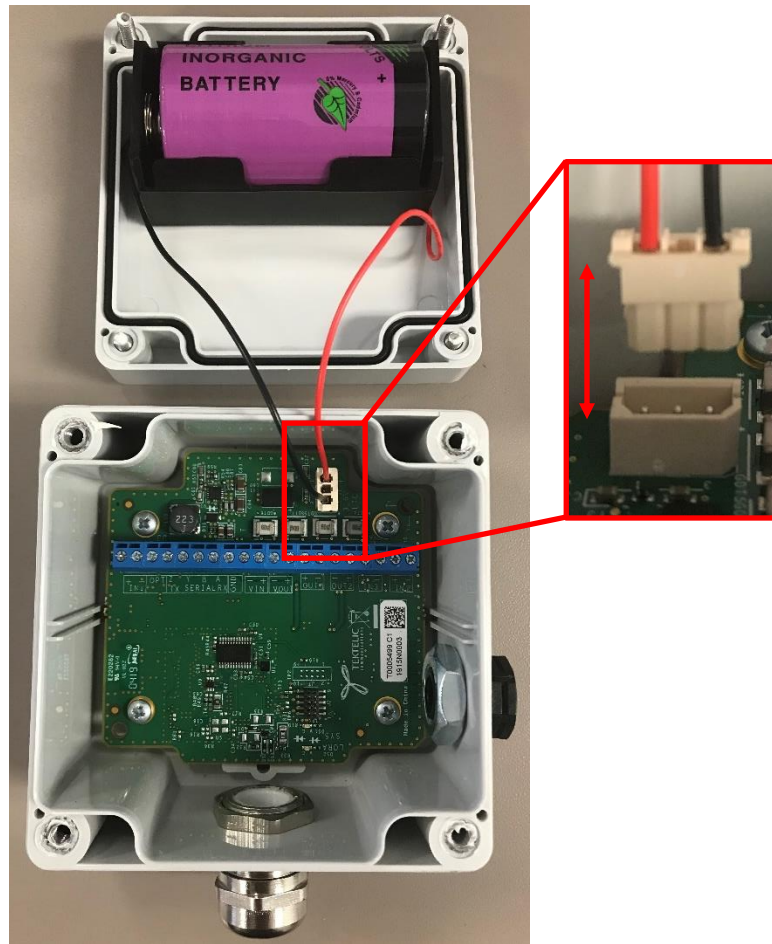


Figure 5-2: Battery Connector Removal

3. Remove the battery from the battery holder.
4. Insert a new battery into the battery holder. The battery and battery holder are both labeled with + symbols, be sure to line these up.
5. Plug the battery into the receptacle on the PCBA. The connector will only plug in the correct direction.
6. Check for LED activity. Blinking LEDs indicate the board is powered on and the battery replacement was successful.
7. Replace the enclosure cover, and re-insert the four screws.

6 Compliance Statements

Federal Communications Commission:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:


1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To comply with FCC exposure limits for general population / uncontrolled exposure, this device should be installed at a distance of 20 cm from all persons and must not be co-located or operating in conjunction with any other transmitter.

6.1 Proposition 65

 **WARNING:** This product can expose you to chemicals including lead, nickel & carbon black, which is known to the State of California to cause cancer, birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

References

- [1] LoRa Alliance, "LoRaWAN Specification," ver. 1.0.2, 2016.
- [2] LoRa Alliance, "LoRaWAN 1.1 Regional Parameters," ver. 1.1, rev. B, Jan 2018.
- [3] TEKTELIC Communications Inc., "LoRa IoT Industrial Transceiver Technical Reference Manual," ver 1.4, Aug 2020.